

# DEMERBOX

ULTIMATE OUTDOOR BLUETOOTH® SPEAKER

## DB2 QUICKSTART GUIDE

### CHARGING

#### FIRST TIME USE

Charge the DemerBox DB2 fully before using for the first time. The light on the charger will turn from red to green when fully charged.

#### CHARGE STATUS

The five green LED lights on the DemerBox DB2 control panel show the battery state of charge. When all five LEDs are lit up, it will have approximately 40 hours of continuous play time.

#### PRESERVING BATTERY LIFE

For best long-term battery life, don't leave the DemerBox DB2 plugged in for extended periods after the battery is charged.



### USING THE DEMERBOX

#### SINGLE UNIT MODE

Turn on the DemerBox DB2 by pressing the Power button (⏻). Find DemerBox under your device's Bluetooth® settings and select it.

#### CHARGING A DEVICE USING THE DB2

1. Plug a device into the USB charge out port on the DB2.
2. Turn on the DemerBox DB2. Keep in mind, a DB2 battery will drain *faster if you're charging a device from it.*

#### AUX CABLE

Plug one end of the AUX cable into the DemerBox DB2 and the other into the audio output of your device.

#### VOLUME CONTROLS

You can control the volume two ways:

1. Use the volume controls on your device.
2. Use the UP/DOWN (⏮) (⏭) arrow buttons on the front of the DemerBox. These only work in Bluetooth mode.

### USING IN AND AROUND WATER OR SAND

**IMPORTANT:** Your DemerBox is only waterproof and sealed when the port plug is properly inserted!

#### TO INSERT THE PORT PLUG

1. Unscrew the port plug from its holder inside the DB2. To do this, use one hand to hold the port plug collar while using your other hand to turn the wings.
2. Close the DB2 lid and latch it.
3. Insert the port plug into the port tube outside the DB2 until the port plug is fully seated in the port hole. To do this, use one hand to hold the port plug collar and turn the port plug wings clockwise until the plug is secure in the port hole. A snug fit is all you need.



## MULTI-CAST MODE: CONNECTING MULTIPLE SPEAKERS TOGETHER



### ENABLE MULTI-CAST MODE FOR SPEAKERS

1. Choose a speaker and connect to it via Bluetooth. (This will be the 'Primary' speaker.)
2. Next, press and hold the UP button (▲) until you hear "broadcast **mode enabled**". The right LED light on the keypad will begin to blink.
3. Turn ON (⏻) another DB1 or DB2 speaker. (This speaker will be a 'Satellite' speaker.)
4. On the second speaker, press and hold the DOWN button (▼) until you hear "broadcast **audio enabled**". Both speakers are now ENABLED for multi-cast mode, and ready for pairing.
5. To activate multi-cast pairing, quick press both the UP and DOWN volume buttons (▼ ▲) on the Primary speaker at the same time. Repeat this action on the Satellite speaker.
  - a. The Primary DemerBox LEDs will start a back and forth tracking pattern.
  - b. The Satellite DemerBox LEDs will alternate in a LEFT / RIGHT pattern.
  - c. After a few seconds you should hear "paired." You are now ready to listen to both speakers.

### EXITING MULTI-CAST MODE

To exit multi-cast mode, hold down the UP/DOWN volume buttons (▼ ▲) for 5 seconds. You can also turn the speaker OFF/ON (⏻).

### VOLUME CONTROL

When in multi-cast mode, the Primary speaker volume buttons control the volume on all paired speakers. You can also use the volume control on your device.

### ADD AN ADDITIONAL SPEAKER

Once the boxes are in multi-cast pairing mode, they will stay active for 30 seconds. You may be able to connect several more speakers to the Primary during this time. (You will know if the speakers are active if they display the LED patterns described in 5a, 5b above).

If you are adding another speaker more than 30 seconds after initial Primary and Satellite pairing, repeat steps 3-5c.

