

Polaris Ranger Gen 2 Rear Bumper Installation Instructions

Fitment:


-13-17 Ranger 1000

-13-18 Ranger 900


Part #: 200-1107-G2



- 1) Remove tailgate to access the outer 10mm bolts on each side behind tailgate.

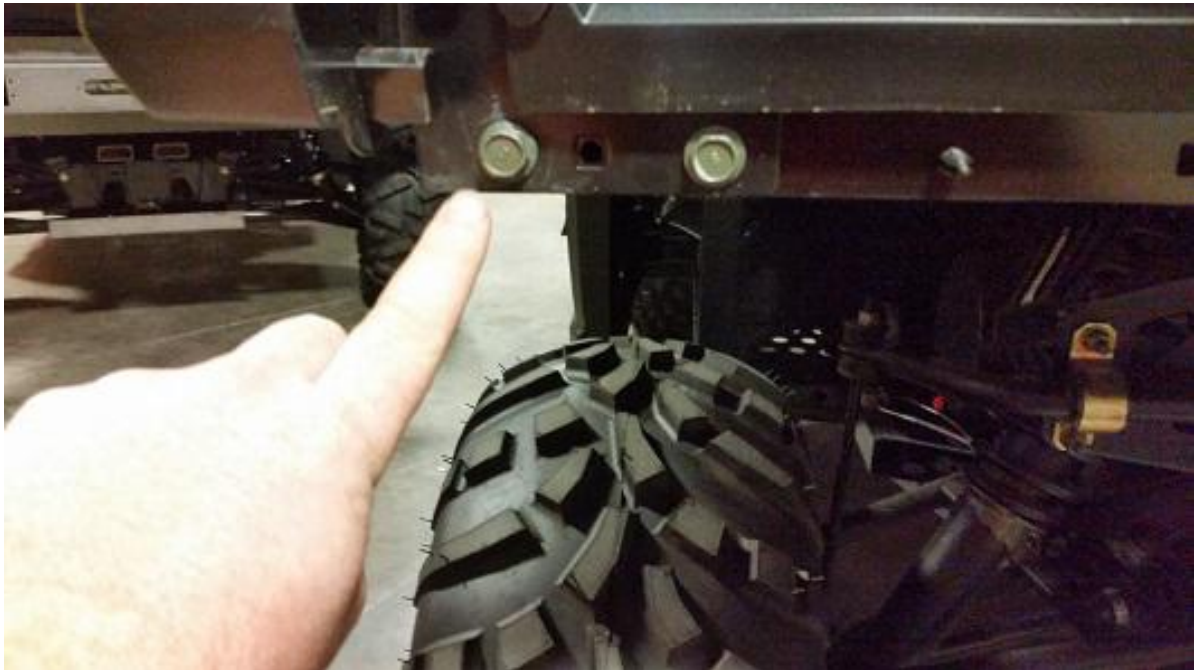

- 2) With bolts removed hold bumper into place and secure reusing the 10mm bolts. Leave bolts loose until all hardware is in.

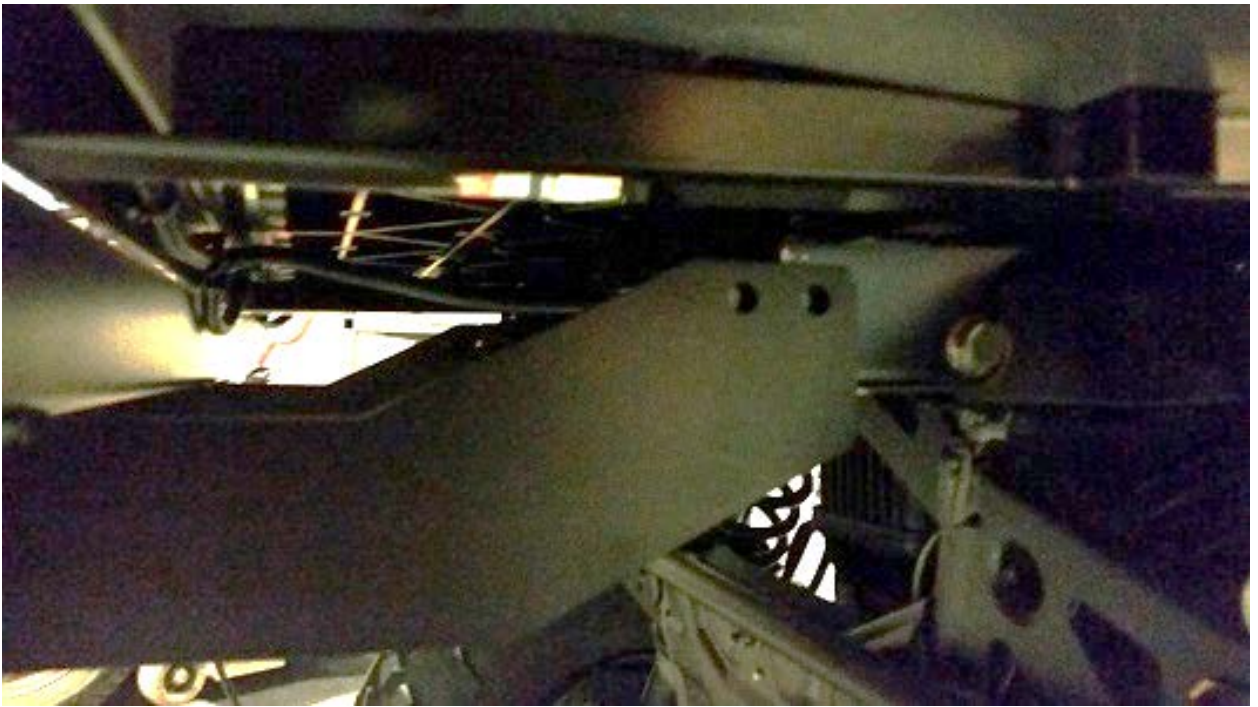

- 3) Using the supplied hardware secure bumper to frame and tighten all hardware. Installation is complete

Note: torque to factory specs